

## Cheat Sheet



### Setting the Time

On the first use, or after a power failure, the oven's display will be flashing. Please note: to start any cooking program, the current time must be set. (if the oven is being turned on for the first time, it is also recommended you set the required language).

1. Turn the **Programming knob** to set the displayed hour (keep the knob turned to speed up the increase or decrease of time).
2. Press the **Programming knob**.
3. Turn the **Programming knob** to set the minutes (keep the knob turned to speed up the increase or decrease of time).
4. Press the **Programming knob** to complete the setting.

### Select a Function & Temperature

1. Press the **Function knob** to turn on the display
2. Turn the **Function knob** to the right or left to select the required function.
3. Press the **Programming knob**.
4. Turn the **Programming knob** to set the temperature.
5. Press the **Programming knob** or wait 3seconds.
6. Press the **Function knob** to start cooking.

Press and hold the function knob down for around 3 seconds to immediately terminate any cooking operation.