


## Cheat Sheet

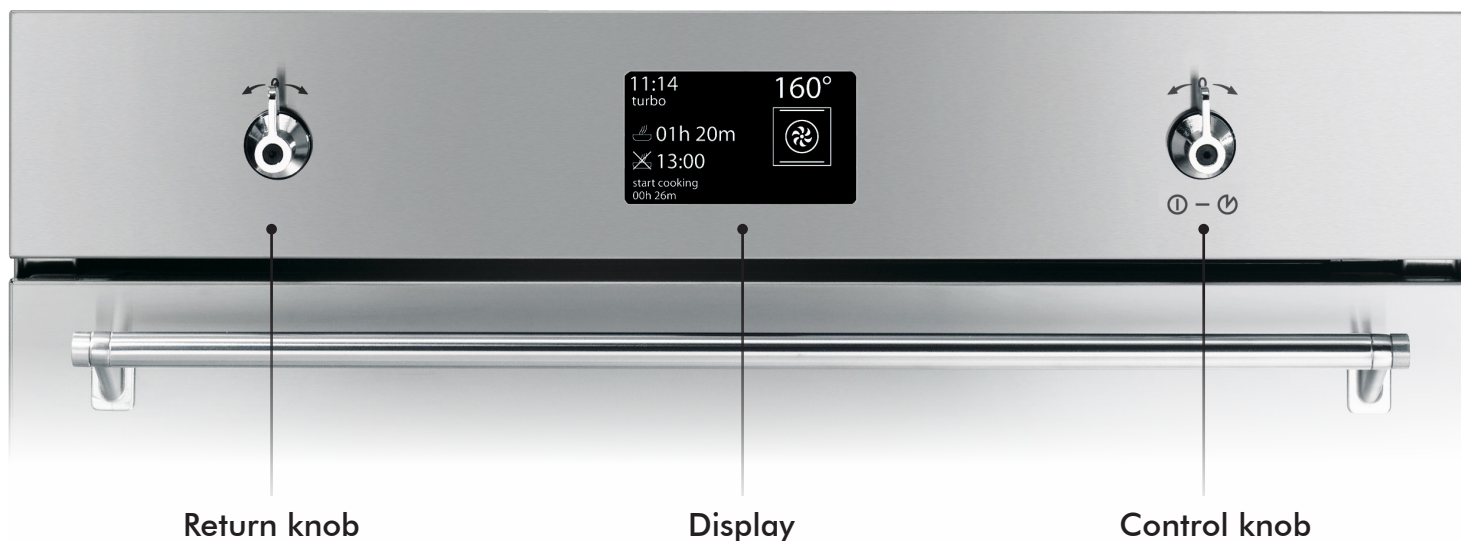

### Setting the Time

On the first use, or after a power failure, the oven's display will be flashing. Please note: to start any cooking program, the current time must be set. (if the oven is being turned on for the first time, it is also recommended you set the required language).

1. Press the **Control knob** to enter the settings menu.
2. Turn the **Control knob** to the right or left to select Clock.
3. Turn the **Control knob** right or left to set the hour.
4. Press the **Control knob** to move to changing the minutes.
5. Turn the **Control knob** right or left to set the minutes.
6. Press the **Return knob** to confirm.

### Select a Function & Temperature

1. Press the **Control knob** to enter the oven menu.
2. Turn the **Control knob** to the right or left to select cooking functions from the main menu. Then press to confirm.
3. Turn the **Control knob** to select the required function. Press the knob to confirm the selection.
4. The appliance will begin automatic preheating. The display will show the chosen function, the pre-set temperature, the current time and the progress bar of the temperature reached (preheating).
5. To adjust temperature turn **Control knob** left or right, and press to set temperature.
6. When the preheating stage is over a buzzer will sound to indicate that the food can be placed inside the oven.

#### Interrupting a function

7. Press the **Return knob** to interrupt a cooking function. Select the required option and confirm it using the return knob.